


How to remove the top from the cooler:



- Step 1:
- Remove two screws attaching front panel

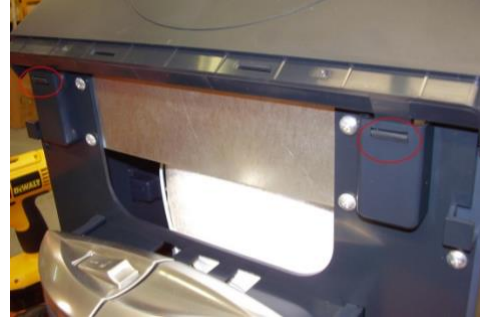

- Step 4:
- Lift off the top
 - Note: Part is hooked in two places at the front



- Step 2:
- Slide panel upwards and remove



You now have full access to the top of the cooler



- Step 3:
- Remove two screws from rear of top cover